

A part of PIERR AUTOMATIK AB



GSM-START


LINKING MAN AND MACHINE



GSMS-SW22TB QUICKSTART GUIDE

To use the unit a SIM-card is required.

1. Make sure the SIM-card has balance and that the PIN-lock is disabled.
2. Install the SIM-card first then connect the unit and power on.

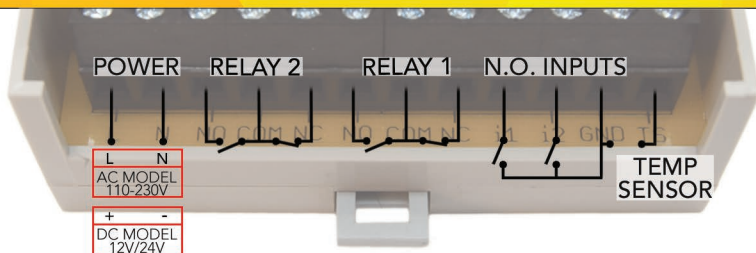

3. Wait (about 1 min) for the "SIG" led to start flashing every fourth second.
4. Send an SMS to the unit containing "SW0000CHECK", wait for a reply.
5. Grab the app from Appstore or Google play for more commands.



GSMS Remote Control
Utilities

GET

6. In the app go "Settings" > "Select profile" > "Create" and fill in the details.

Profile name:	What you want to call the profile
Password for unit:	If unit is new use "0000" = four zero's
Phone number to unit:	Phone number to installed SIM-card
Select unit:	Select "GSMS-SW22"

7. Please see the complete manual below for all commands and settings!

The full manual can be found here: www.gsm-start.com/sw22tb_din_en